




PROACTIVE SOLUTIONS

## DB2519 WATERSTOP PLACEMENT DETAIL AND CONSTRUCTION SCHEDULE WITH KIM ADMIXTURE

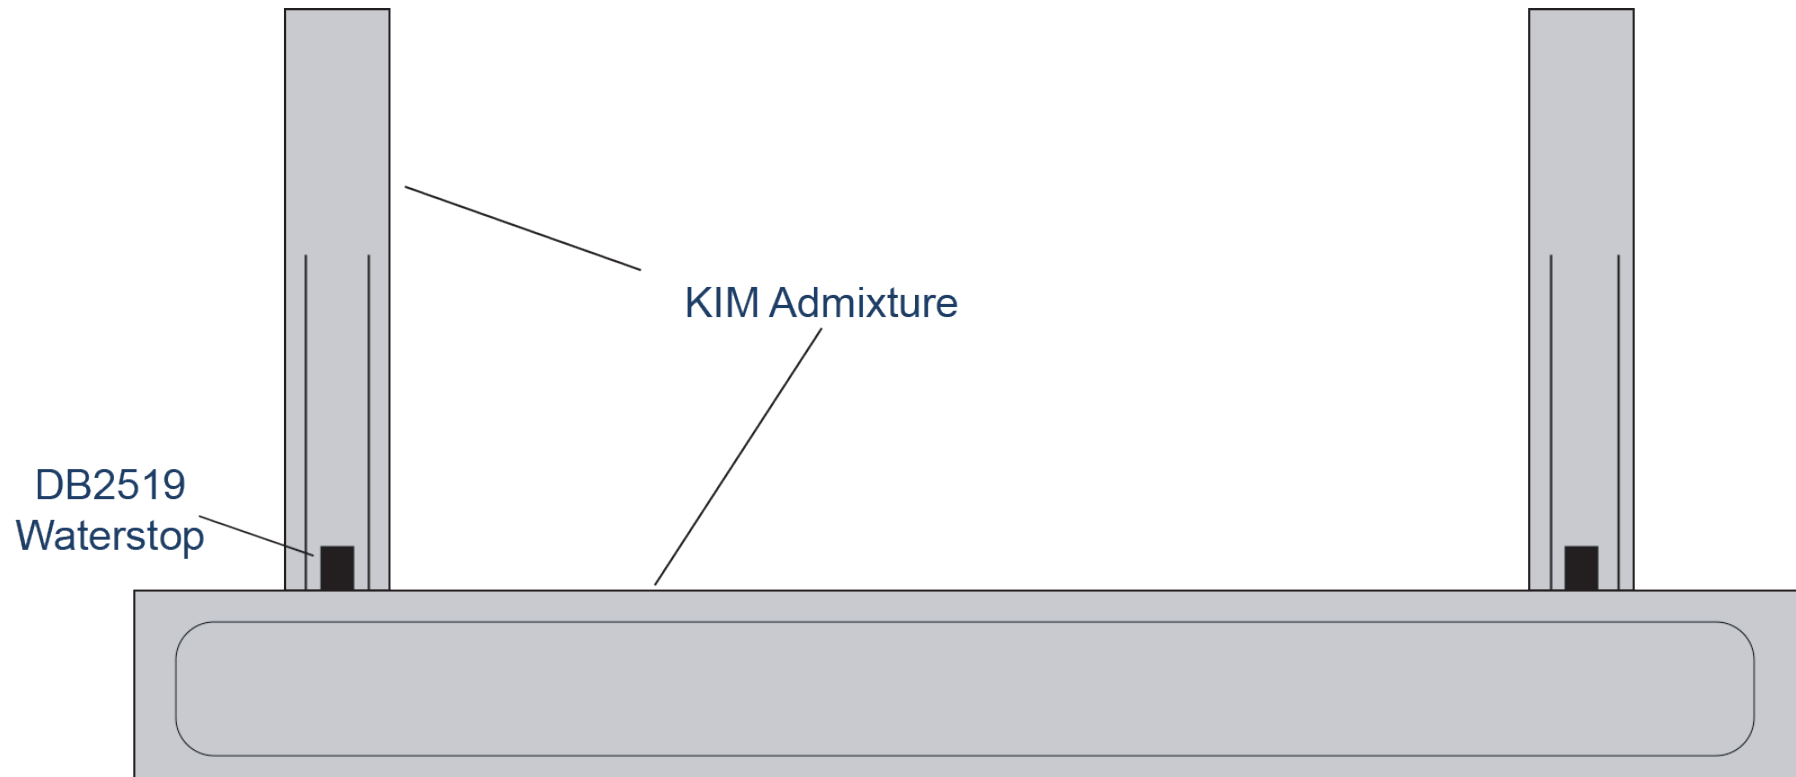

1. Base slab/footing completed with (KIM Admixture)
2. DB2519 Waterstop install
3. Lift Pit Wall with (KIM Admixture)

Not To Scale

**Please Note:** All Information Expressed In This Document Is General & Should Be Consulted By KRYFIX On A Project By Project Basis To Ensure The Advice Is Correct

