


## **DETAILING WATERPROOF CONCRETE**

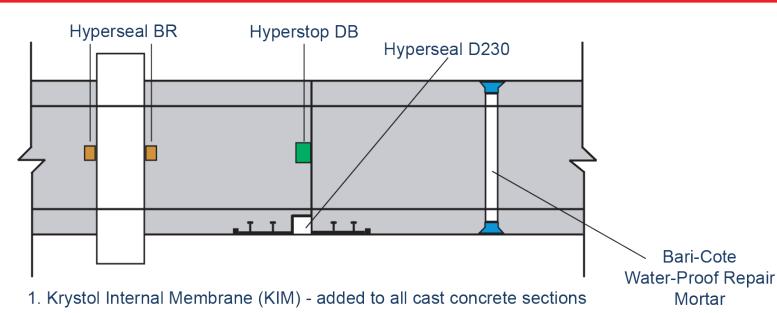

- 2. Hyperstop DB Hydrophilic waterstop installed to construction joints
- 3. Hyperseal D230 externally placed PVC waterstop profile installed to construction joints
- 4. Hyperseal BR Hydrophilic sticky back waterstop wrapped around pipe penetrations or similar
- 5. Bari-Cote waterproof repair mortar for tie-bolt holes and other imperfections

## Not To Scale

Please Note: All Information Expressed In This Document Is General & Should Be Consulted By KRYFIX On A Project By Project Basis To Ensure The Advice Is Correct



